


ATLAS UNPACKING INSTRUCTIONS


DK input here

UNPACKING GUIDE


1. Loosen the lock and remove the top cover by pulling it upwards.

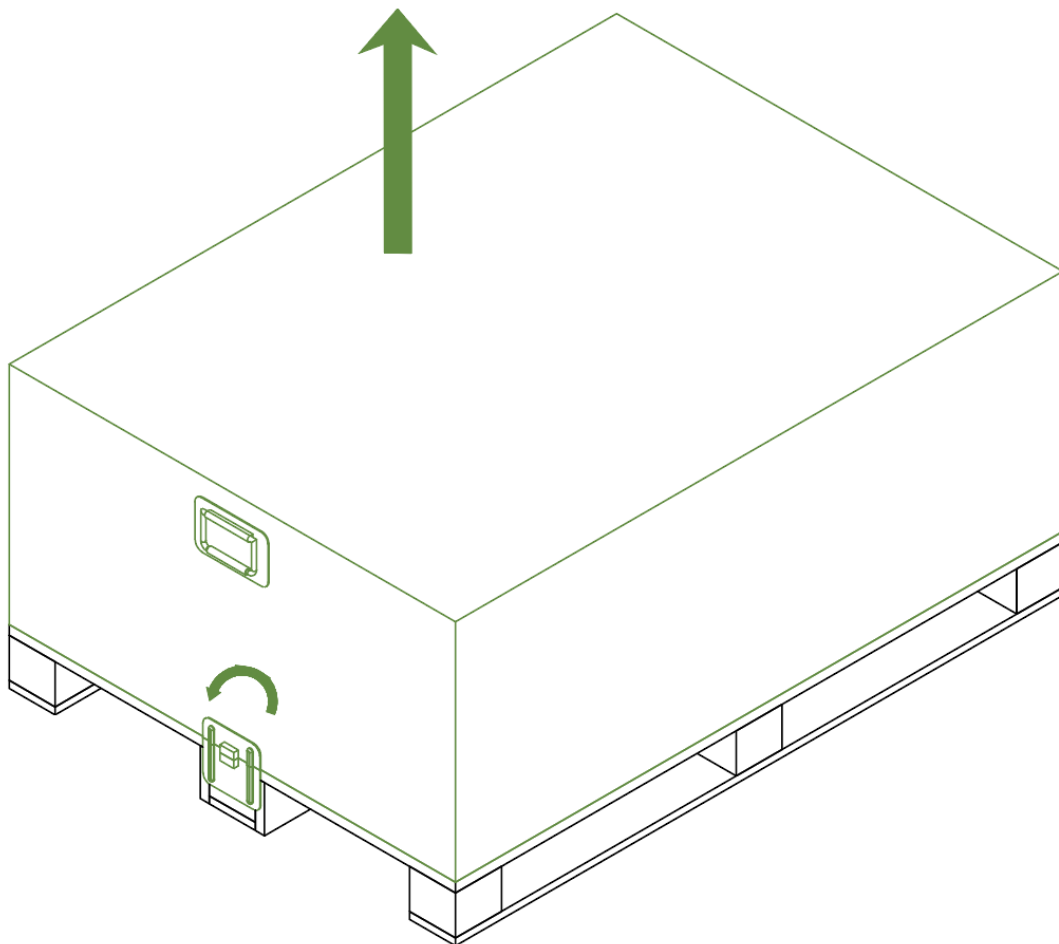


2. Take out all accessories, including 2 ramps and the remote on the upper floor. Put them aside, and we'll use them later.

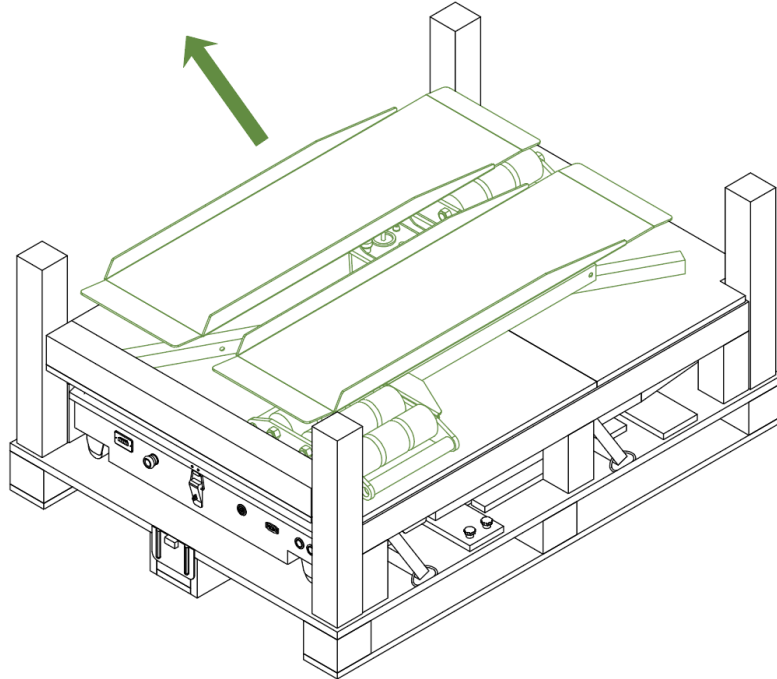


3. Open the middle cover.

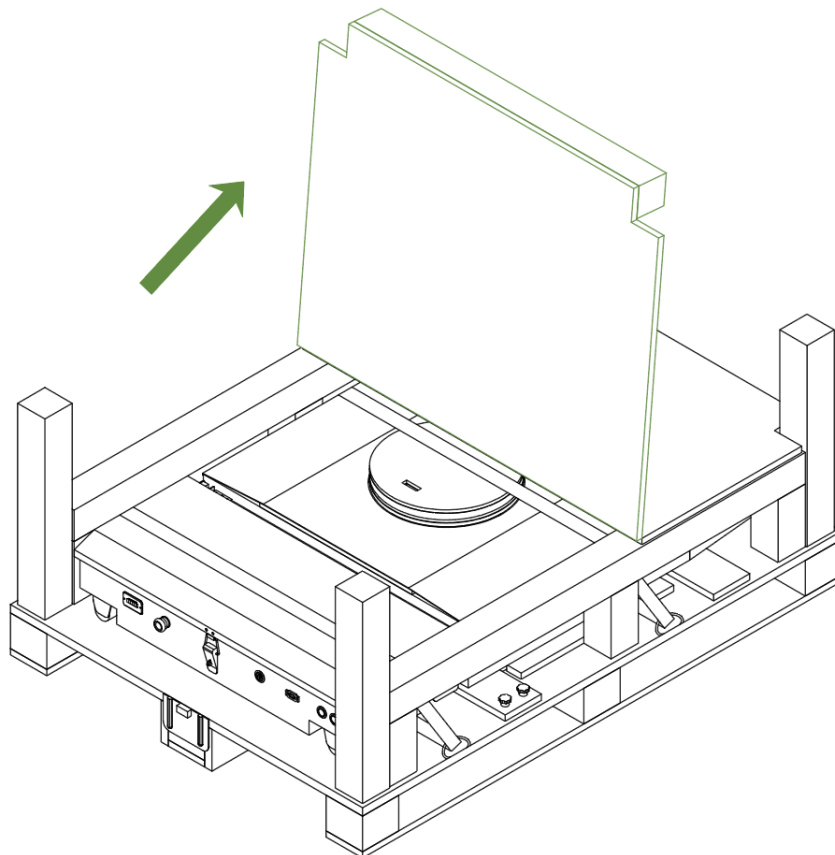


4. Loosen 2 bands and pull them out.
Remove 4pcs of finger screws on both sides and pull the wooden block board out.

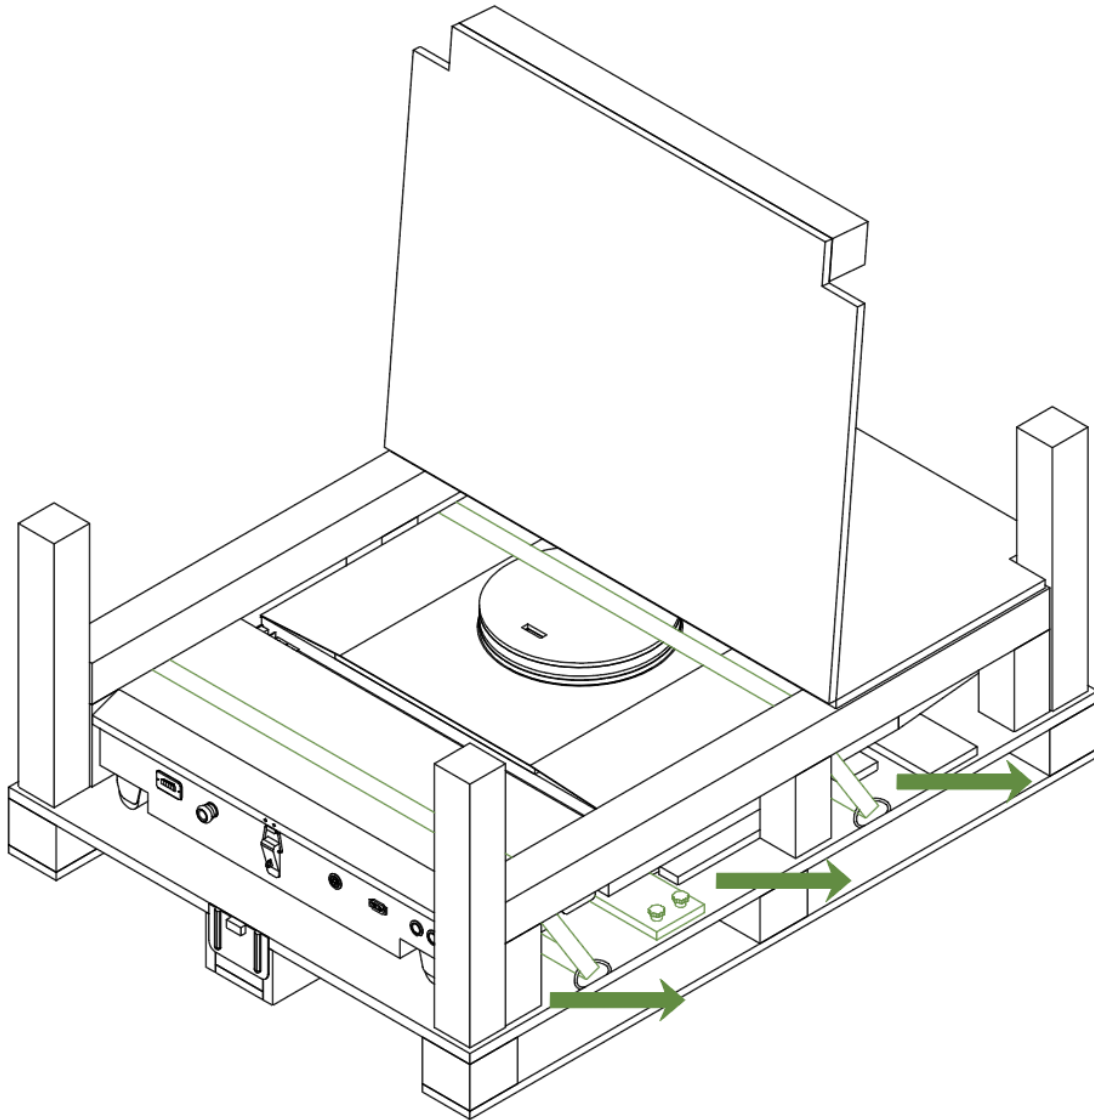


5. Open the head cover of the Atlas machine.
Connect the battery plug to the battery socket.
Close the head cover.
Note: The battery is in an independent package.

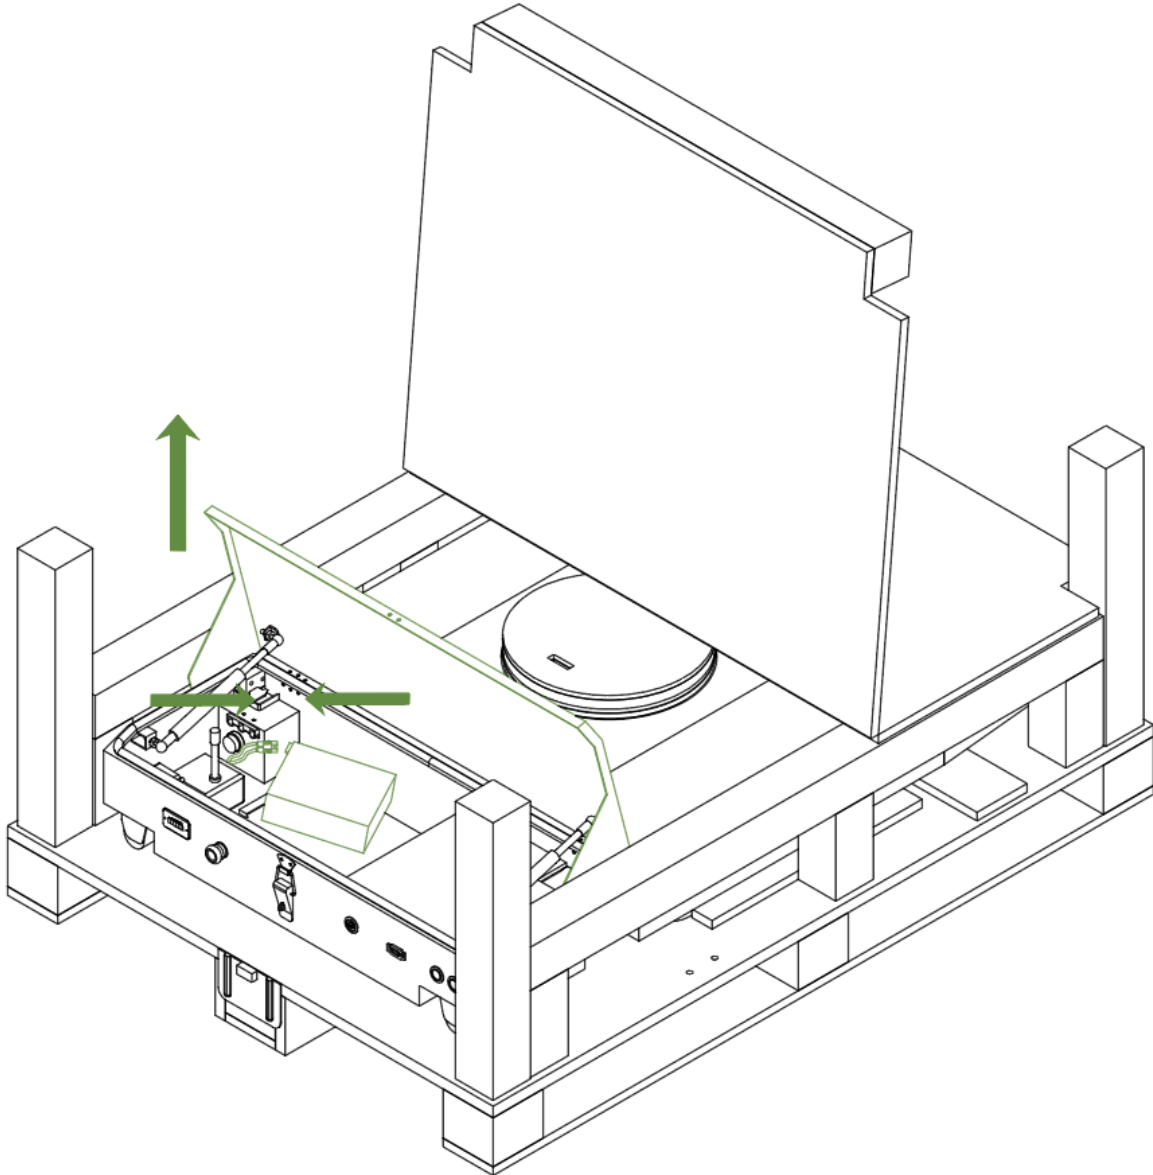

6. Go across 2 holders on both sides with a Velcro strap.
Put the connected battery in and make it tight with the Velcro strap.
Close the head cover.

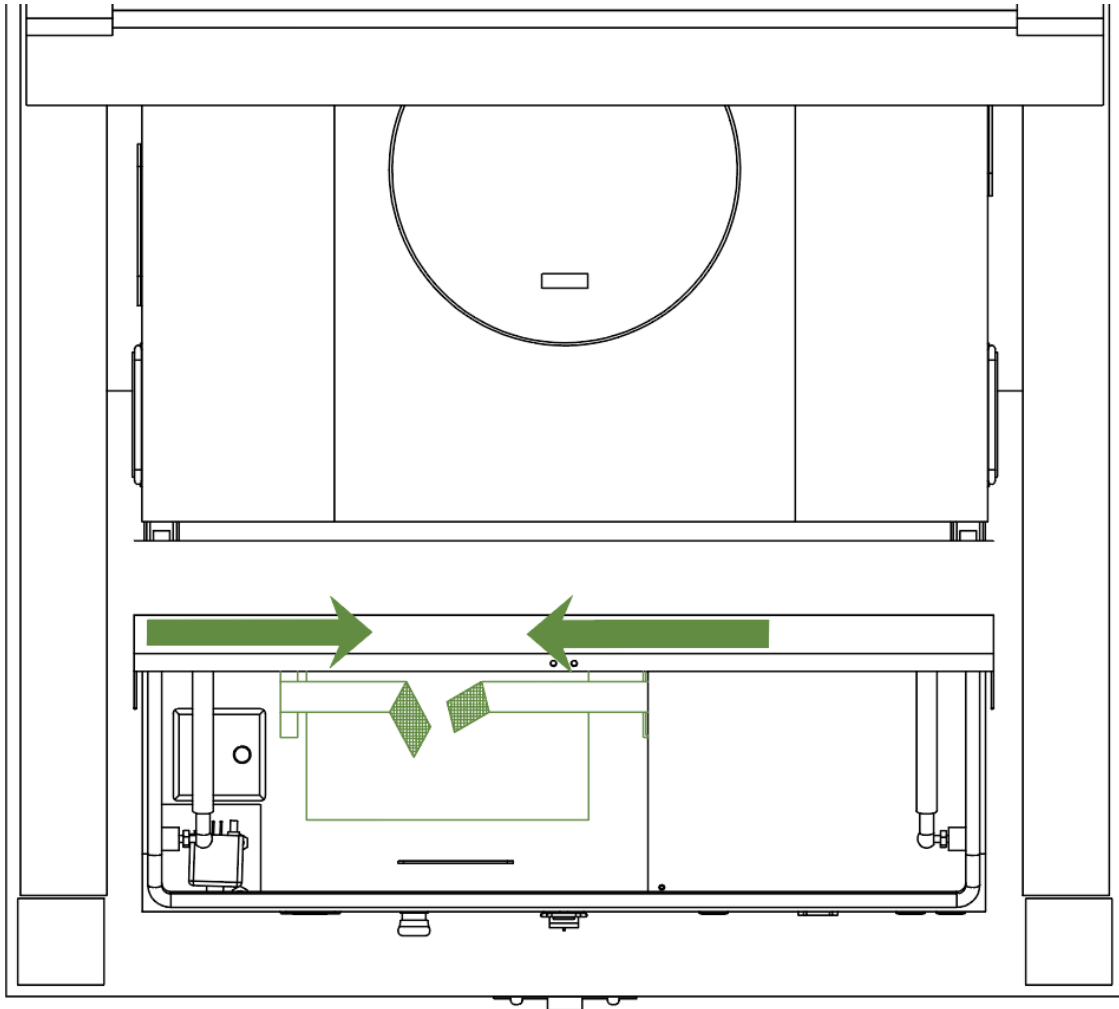

7. Put 2 ramps in the front like the illustration below.

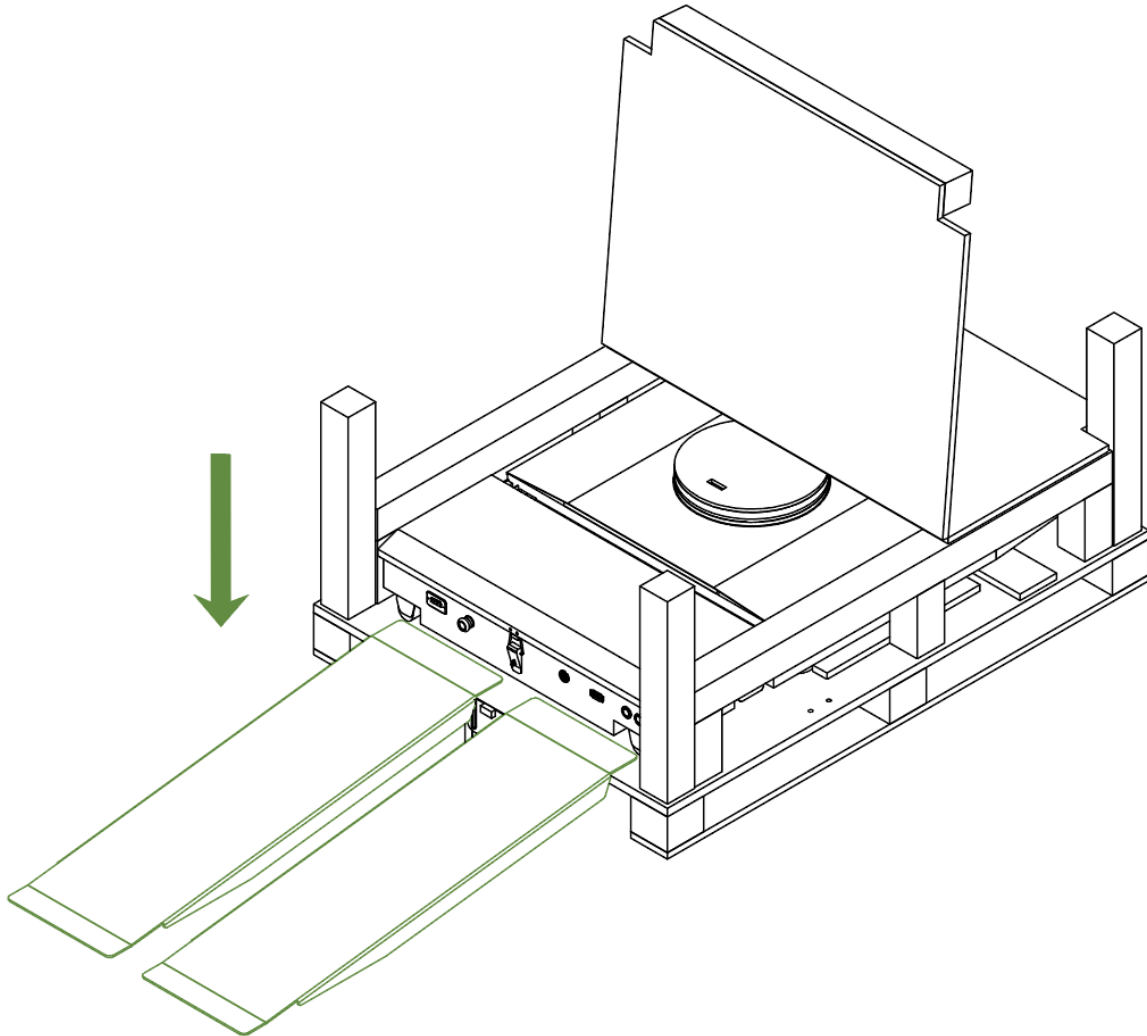

8. Press the Atlas machine Power ON/OFF button meanwhile press the remote power button. Operate the left joystick of the remote to control the Atlas machine going out of the wooden box.

Please refer to the manual for more information.

Warning! Regarding the hydraulic function, please refer to the manual on how to add Hydraulic fluid and how to use.

